




# Remote Sushi Display Case

## Installation Guide

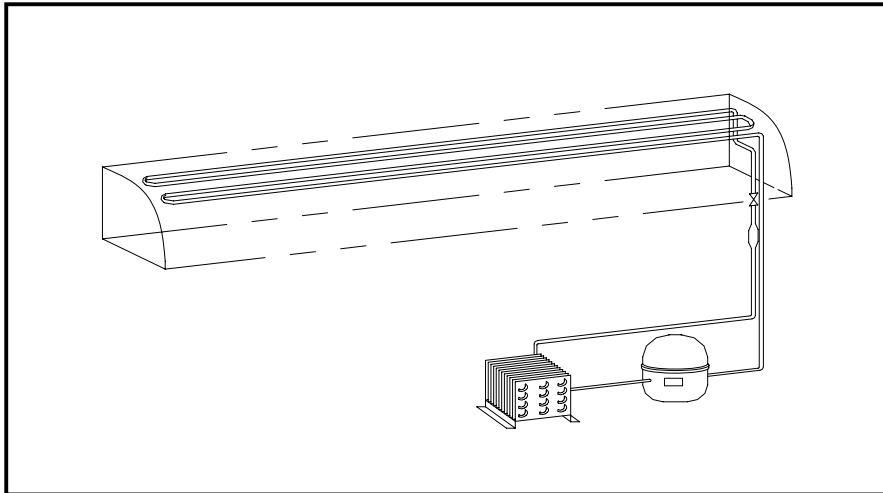

**Before hooking up a Condensing Unit, Please follow the instruction bellow.**

1. Please handle with care and Do not make the Inlet /Outlet gas nozzles touch the ground directly.
2. Please check and make sure Gas doesn't leak after hooking up.
3. Please have the condensing unit meet following recommended horse power(HP)

Model	Item Description (Outside Dimension)	# of Linked Combination	Recommended HP	
			IN-DOOR Installation (c/u)	OUT-DOOR Installation (c/u)
BASS4	4 feet (47 <sup>1</sup> / <sub>4</sub> " x 11 <sup>3</sup> / <sub>8</sub> " x 10 <sup>5</sup> / <sub>8</sub> " )	1 Unit	1/4 HP	1/3 HP
		2 Units	1/3 HP	1/2 HP
		3 Units	1/2 HP	1/2 HP
BASS5	5 feet (59 <sup>1</sup> / <sub>8</sub> " x 11 <sup>3</sup> / <sub>8</sub> " x 10 <sup>5</sup> / <sub>8</sub> " )	1 Unit	1/4 HP	1/3 HP
		2 Units	1/3 HP	1/2 HP
		3 Units	1/2 HP	3/4 HP
BASS6	6 feet (70 <sup>7</sup> / <sub>8</sub> " x 11 <sup>3</sup> / <sub>8</sub> " x 10 <sup>5</sup> / <sub>8</sub> " )	1 Unit	1/3 HP	1/2 HP
		2 Units	1/2 HP	3/4 HP
		3 Units	3/4 HP	1 HP

\* In Door : Less than 15ft between the Remote Sushi Display case and Condensing Unit.

\*\*Out Door : Less than 15 ~30ft between the Remote Sushi Display case and Condensing Unit. (Do not make over length)

\*\*\* We recommend to use a expansion valve that is not equipped thermo-sensor.